

OptiProtect ^â

optimal
optical protection



OptiProtect sample kit (mounting instructions)

try out the OptiProtect samples on your display or on enclosed ttv substrate sample

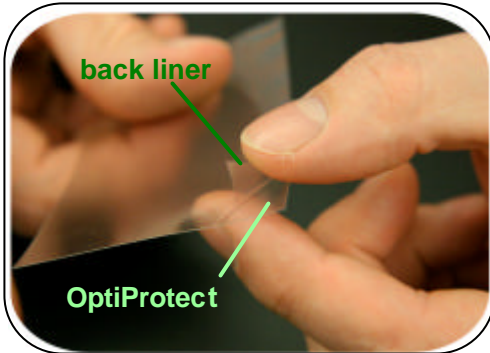


fig. 1



fig. 2

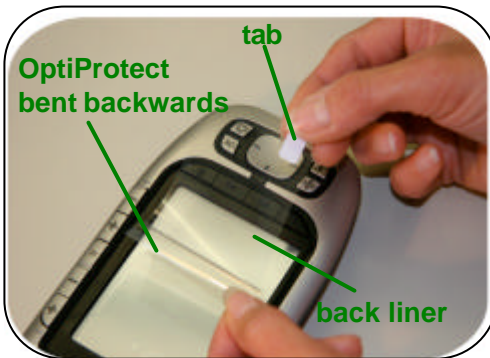


fig. 3

Procedure

- clean the display or surface to be protected
- hold **OptiProtect** in one hand with back liner up (wear cotton gloves to prevent finger prints)
- use thumb of other hand to peel off the back liner from a small area (or pull tab). see fig.1

- turn **OptiProtect** (adhesive facing down).
- position back liner free end of **OptiProtect** on your display or on surface to be protected. see fig. 2
- hold opposite end and bend **OptiProtect** backwards. Peel off back liner with one hand, simultaneously rolling **OptiProtect** slowly onto the display with your other hand. See fig. 3
- Carefully flatten out **OptiProtect** with a clean cotton cloth, pushing bubbles towards the edges.

Note: In case of bubbles between **OptiProtect** and display, gently push them towards edges or lift up **OptiProtect** partly (including area containing air bubble) or completely and reapply **OptiProtect** - more slowly).